



Innesto rapido Serie WTR a gomito maschio girevole corto BSPT, BSPP e metrico WTRSL-R / WTRSL-G - Tierre

LTH
HYDRAULIC
COMPONENTS
& FLUID CONTAMINATION
CONTROL

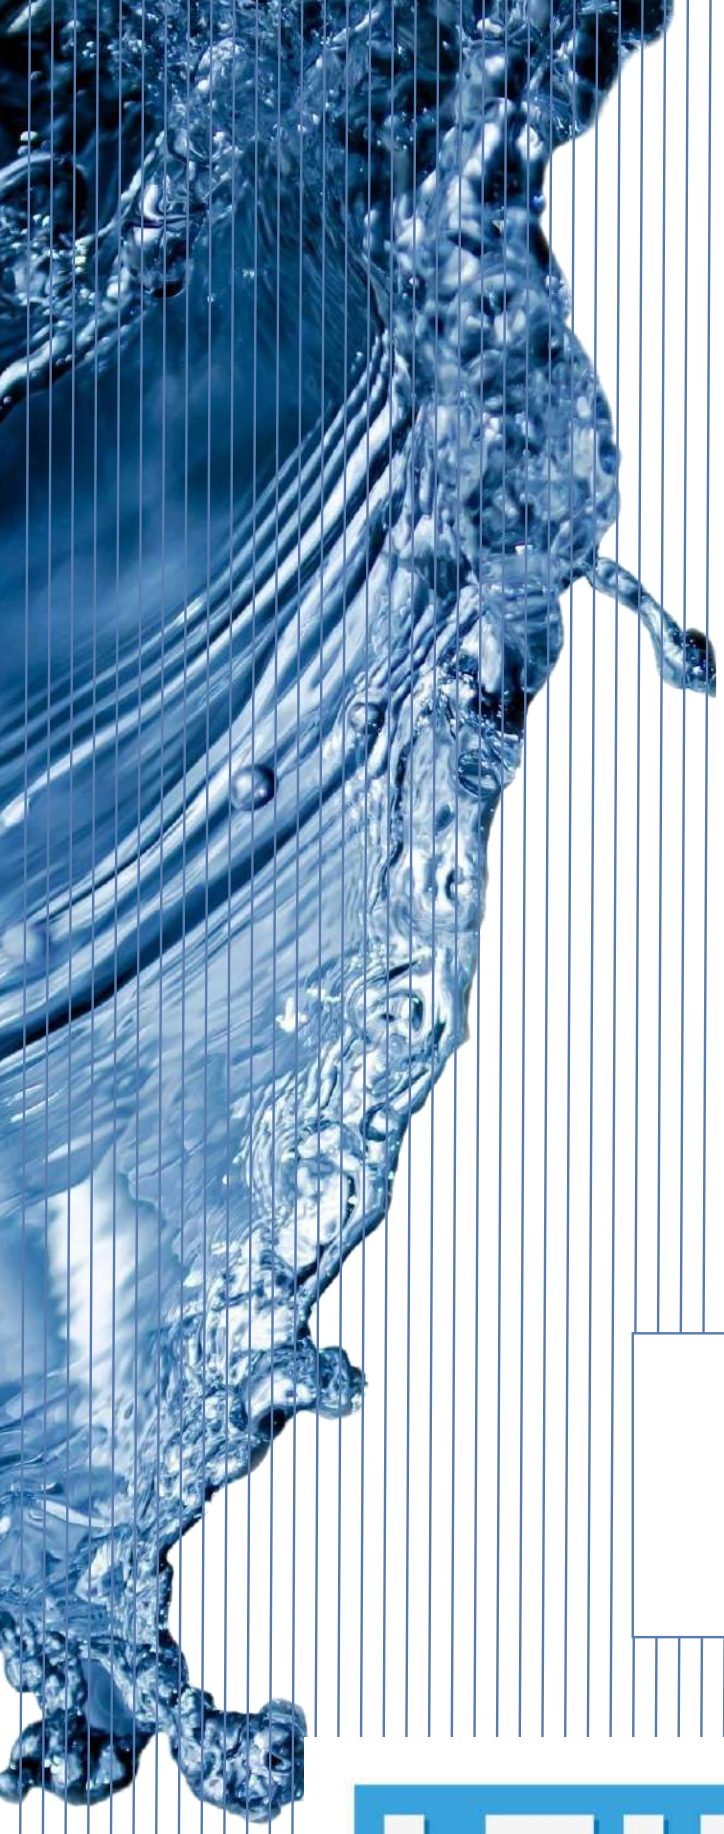

All trademarks belong to their respective owners; third party trademarks, product names, trade names, corporate names and company names mentioned may be trademarks of their respective owners or registered trademarks of other companies and are used for instructional purposes and for the benefit of the owner, without any end of Copyright infringement in force.

Tutti i marchi riportati appartengono ai legittimi proprietari; marchi di terzi, nomi di prodotti, nomi commerciali, nomi corporativi e società citati possono essere di proprietà dei rispettivi titolari o registrati da altre società e sono stati utilizzati a puro scopo esplicativo e a beneficio del possessore, senza alcun fine di violazione dei diritti di Copyright vigenti.

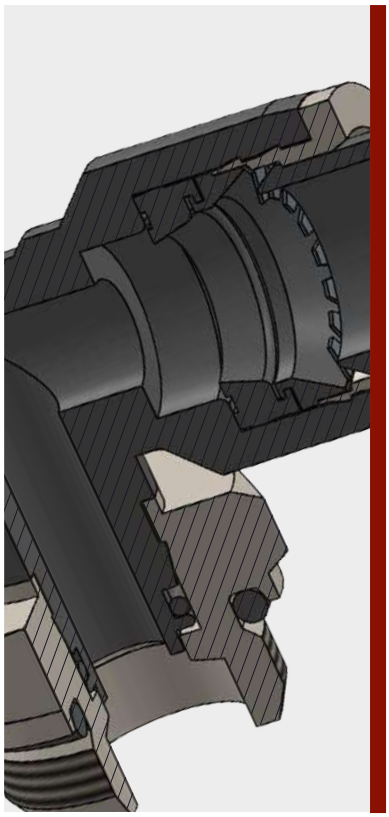

-20°C ÷ 80°C

Working pressure:
16 Bar
Negative pressure:
- 750 mmHg (- 0,999 Bar)

Compressed air & vacuum

- Taper gas BSPT ISO 7
  from R1/8" to R1/2" with teflon
- Parallel gas BSPP ISO 228
  from G1/8" to G1/2"
- Metric ISO 262 M5, M6, M7
- NPT from N1/8" to N1/2"
- UNF 10-32

Polyamide PA,
Polyurethane PU,
Polyethylene PE


Body: nickel plated brass and high performance BPT
Release sleeve: acetal resin POM
Cartridge: nickel plated zinc
Lock claw: stainless steel AISI 301
Back ring: POM
O-ring: NBR silicon free
V-Seal: NBR silicon free

REACH Products in compliance with the directive 1907/2006

RoHS2 Products in compliance with the directive 2011/65/UE

SILICON FREE

CONSTRUCTION DETAILS

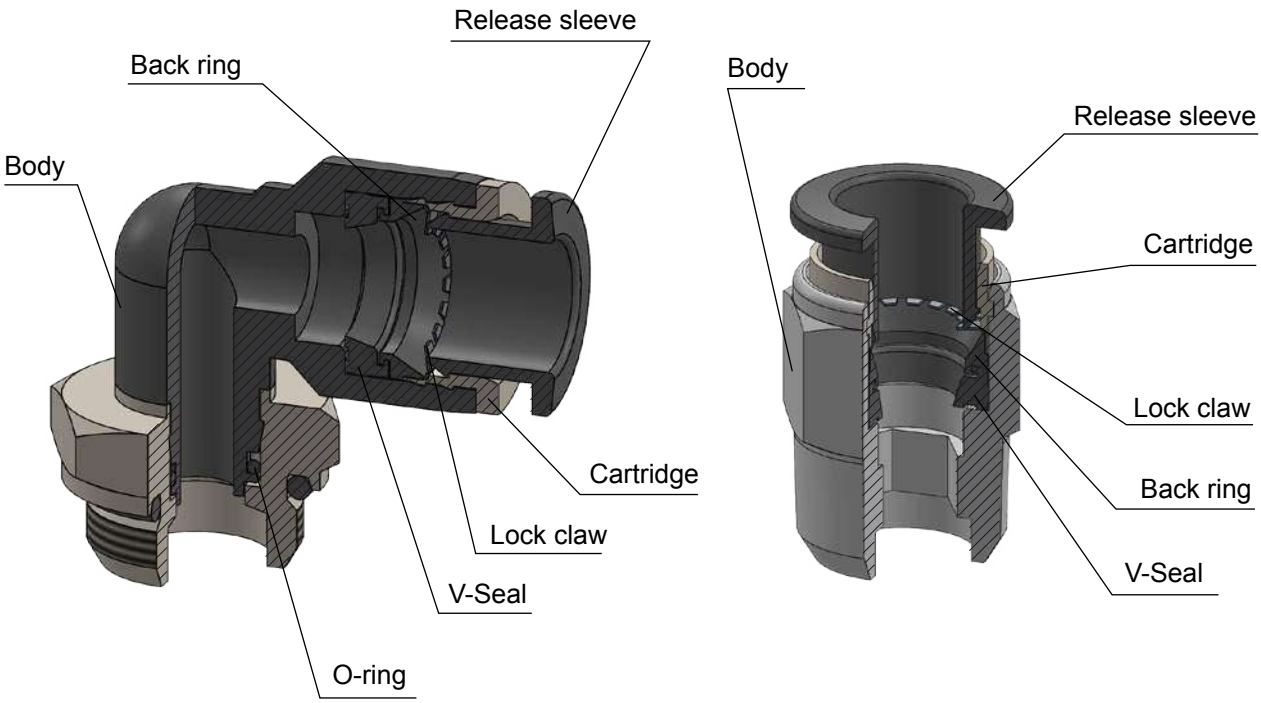


INSERTION OF THE TUBE INTO THE FITTING

- Make sure the tube is fully inserted into the fitting.
- To insert the tube into the fitting cut the tube off square (90°), insert tube up to the fitting end stop, and pull back gently to make sure it is correctly connected.
- If there is any damage or scratches on the tube surface the tube is an oval shape, air leakage and tube release may occur. Check the tube condition carefully.
- The OD of polyurethane tube expands when pressure is applied. Reinsertion into the fitting may not always be possible. Check the OD of the tube and renew it the expansion is out of tolerance.

DISCONNECTION OF THE TUBE FROM THE FITTING

- Make sure the pressure in the system is zero before releasing the tube from the fitting.
- To release the tube, press the release sleeve towards the fitting with one hand and pull the tube away from the fitting with the other hand.
- Always remove the section of tube previously inserted into the fitting before reinserting the tube by cutting back the tube. Always use the correct tube cutter in order to cut the tube square and free of damage.

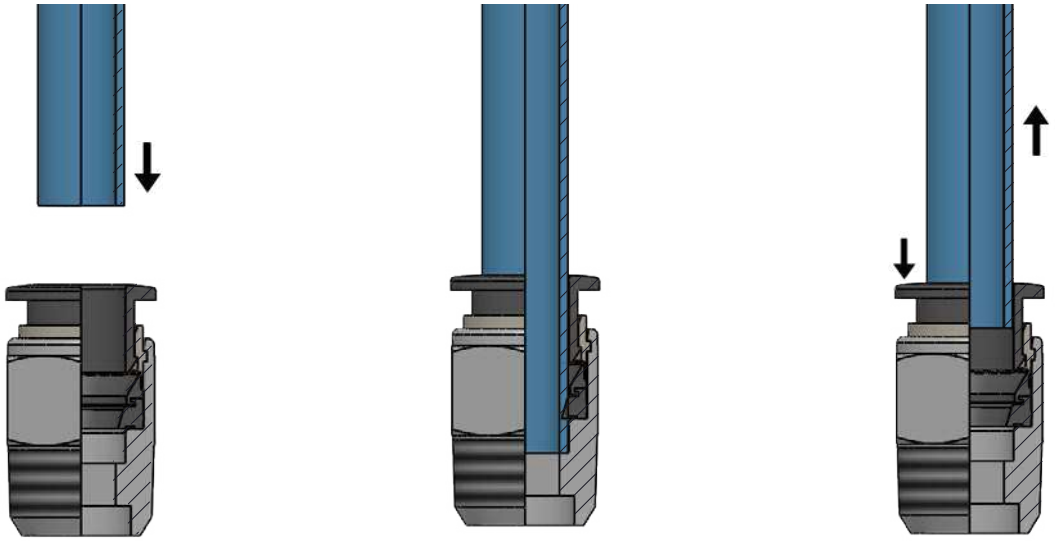

TOLERANCE - METRIC TUBE

Ø TUBE (mm)	4	6	8	10	12	14	16
TOLERANCE (mm)	± 0,1	± 0,1	± 0,1	± 0,15	± 0,15	± 0,15	± 0,15


TOLERANCE - INCH TUBE

Ø TUBE	5/32	3/16	1/4	5/16	3/8	1/2
TOLERANCE (inch)	±0,003	±0,003	±0,003	±0,003	± 0,005	± 0,005

WTRSL-R

Short swivel male elbow BSPT thread nickel plated




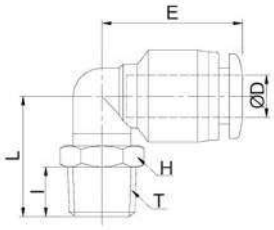

CODE	ØD	T	I	L	E	H	GR.
WTRSL04R01	4	R 1/8"	7,0	16,0	17,5	10,0	5,8
WTRSL04R02		R 1/4"	9,5	19,5	17,5	14,0	6,3
WTRSL06R01	6	R 1/8"	7,0	17,0	19,0	10,0	6,4
WTRSL06R02		R 1/4"	9,5	20,5	19,0	14,0	12,4
WTRSL06R03		R 3/8"	10,5	22,0	19,0	17,0	14,2
WTRSL06R04		R 1/2"	13,5	25,5	19,0	21,0	17,3
WTRSL08R01	8	R 1/8"	7,0	21,3	22,8	12,0	11,5
WTRSL08R02		R 1/4"	9,5	21,5	22,8	14,0	13,3
WTRSL08R03		R 3/8"	10,5	23,0	22,8	17,0	20,3
WTRSL08R04		R 1/2"	13,5	26,5	22,8	21,0	21,9
WTRSL10R01	10	R 1/8"	7,0	25,5	26,3	14,0	15,4
WTRSL10R02		R 1/4"	9,5	26,0	26,3	14,0	18,4
WTRSL10R03		R 3/8"	10,5	25,0	26,3	17,0	21,9
WTRSL10R04		R 1/2"	13,5	28,5	26,3	21,0	24,8
WTRSL12R02	12	R 1/4"	9,5	29,5	29,6	17,0	33,6
WTRSL12R03		R 3/8"	10,5	26,5	29,6	17,0	36,2
WTRSL12R04		R 1/2"	13,5	30,0	29,6	21,0	39,5

WTRSL-G

Short swivel male elbow BSPP & metric thread nickel plated

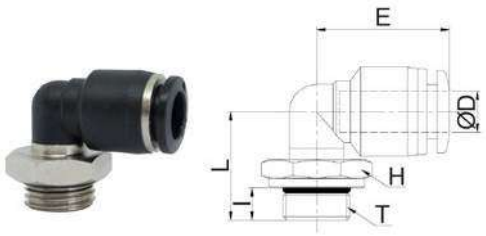

CODE	ØD	T	I	L	E	H	GR.
WTRSL04M5	4	M5x0,8	3,8	15,3	17,5	8,0	5,2
WTRSL04M7		M7x1	4,5	17,0	17,5	10,0	6,1
WTRSL04G01		G 1/8"	4,8	14,8	17,5	14,0	7,6
WTRSL04G02		G 1/4"	5,5	16,0	17,5	17,0	11,3
WTRSL06M5	6	M5x0,8	3,8	15,3	19,0	8,0	5,8
WTRSL06M7		M7x1	4,5	17,0	19,0	10,0	6,7
WTRSL06G01		G 1/8"	4,8	15,8	19,0	14,0	8,3
WTRSL06G02		G 1/4"	5,5	17,0	19,0	17,0	13,3
WTRSL06G03		G 3/8"	6,5	18,5	19,0	20,0	16,8
WTRSL06G04		G 1/2"	7,5	19,5	19,0	24,0	20,1
WTRSL08G01	8	G 1/8"	4,8	20,0	22,8	14,0	11,9
WTRSL08G02		G 1/4"	5,5	18,0	22,8	17,0	13,8
WTRSL08G03		G 3/8"	6,5	19,5	22,8	20,0	21,2
WTRSL08G04		G 1/2"	7,5	20,5	22,8	24,0	23,9
WTRSL10G01	10	G 1/8"	4,8	24,3	26,3	14,0	21,3
WTRSL10G02		G 1/4"	5,5	23,1	26,3	17,0	24,3
WTRSL10G03		G 3/8"	6,5	21,5	26,3	20,0	27,6
WTRSL10G04		G 1/2"	7,5	22,5	26,3	24,0	31,2
WTRSL12G02	12	G 1/4"	5,5	26,5	29,6	17,0	33,8
WTRSL12G03		G 3/8"	6,5	23,0	29,6	20,0	35,6
WTRSL12G04		G 1/2"	7,5	24,0	29,6	24,0	39,8

LubeTeam Hydraulic S.r.l.
Administration and Headquarter:
Via Tufara Scautieri, 6
83018 - San Martino Valle Caudina (AV)
Office and Warehouse:
S.S. 7 Appia, Km. 237,00
82011 - Airola BN
ITALY

Tel. +39 0823 950 994
Fax +39 0823 412 546

www.lubeteam.it info@lubeteam.it

Italian VAT / C.F. e P.IVA: 01251720627

Follow us



This document is the property of LubeTeam Hydraulic S.r.l. All data reported here are for the exclusive use of the Receiver. Reproduction is not authorized without writing permission, in all or in part of the content of this document, in accordance to Law 633 art. 171, dated April 22, 1941.

Il presente documento è di proprietà della LubeTeam Hydraulic S.r.l. I dati riportati sono per esclusivo del destinatario. La riproduzione, di tutto o in parte, non è autorizzata senza permesso scritto secondo l' art. 171 della L. 633 del 22 Aprile 1941.